



PARTS LIST

322/323 SERIES

322

323

322BG

323BG

322JB


323JB

322T

323T

PART NO. 619722
NORCOLD 08/2002

FRONT VIEW 322/323 SERIES

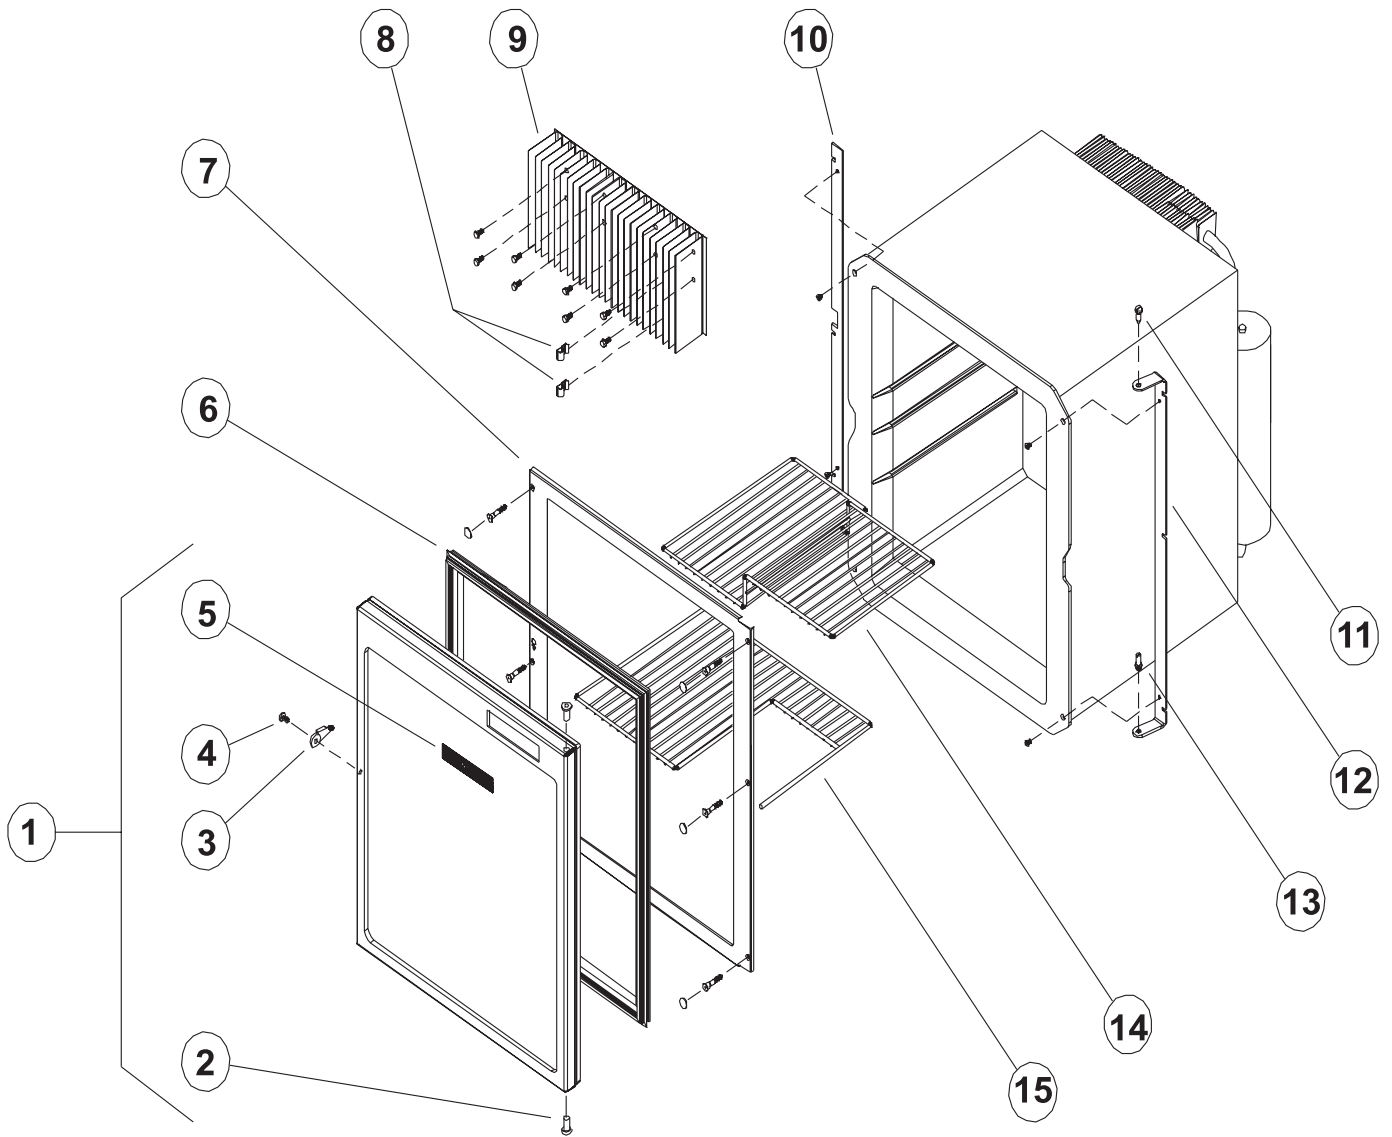


ART01189

FRONT VIEW 322/323 SERIES

NO.	PART #	DESCRIPTION	322	323	322BG	323BG	322JB	323JB	322T	323T
1	61741838	DOOR ASSY-BLACK (USE 620618/322T OR 620619/323T)	X	X						
	619324	DOOR ASSY-BG (USE 620618/322T)			X					
	619339	DOOR ASSY-BG (USE 620619/323T)				X				
	619325	DOOR ASSY-JB (USE 620618/322T)					X			
	619340	DOOR ASSY-JB (USE 620619/323T)						X		
	620618	DOOR ASSY-322T							X	
	620619	DOOR ASSY-323T								X
2	61742022	HINGE BUSHING	X	X	X	X	X	X	X	X
3	61719630	TRAVEL LATCH-BLACK (USE 619330/NATURAL)	X	X						
	619330	TRAVEL LATCH-NATURAL	X	X	X	X	X	X	X	X
4	61747922	RIVET-PLASTIC/TRAVEL LATCH	X	X	X	X	X	X	X	X
5	61747722	NAMEPLATE-NORCOLD/BLACK DOOR (USE 620622/620623)	X	X						
	619331	NAMEPLATE-NORCOLD (USE 620622/BLUE/EG2)			X		X			
	619334	NAMEPLATE-NORCOLD (USE 620623/BLUE/EG3)				X		X		
	620622	NAMEPLATE-BLUE/EG2							X	
	620623	NAMEPLATE-BLUE/EG3								X
6	61719130	DOOR GASKET-GRAY (USE 619584)	X	X	X	X	X	X		
	619584	DOOR GASKET-WHITE							X	X
7	61739830	BREAKER ASSY-BLACK	X	X						
	619318	BREAKER ASSY-BG (USE 620615/322T/323T)			X	X				
	619319	BREAKER ASSY-JB (USE 620615/322T/323T)					X	X		
	620615	BREAKER ASSY-322T/323T							X	X
8	61728722	CLIP-FIN	X	X	X	X	X	X	X	X
9	61721122	FIN ASSY	X	X	X	X	X	X	X	X
10	61741422	SPACER-HINGE/BLACK	X	X						
	619322	SPACER-HINGE/BG (USE 620617/322T/323T)			X	X				
	619323	SPACER-HINGE/JB (USE 620617/322T/323T)					X	X		
	620617	SPACER-HINGE/322T/323T							X	X
11	61114600	HINGE PIN-TOP	X	X	X	X	X	X	X	X
12	61741322	HINGE-BLACK	X	X						
	619320	HINGE-BG (USE 620616/322T/323T)			X	X				
	619321	HINGE-JB (USE 620616/322T/323T)					X	X		
	620616	HINGE-322T/323T							X	X
13	61550722	HINGE PIN-BOTTOM	X	X	X	X	X	X	X	X
14	61720422	SHELF-WIRE/TOP (USE 618061)	X	X	X	X	X	X		
	618061	SHELF-WIRE/TOP	X	X	X	X	X	X	X	X
15	61720522	SHELF-WIRE/BOTTOM (USE 618060)	X	X	X	X	X	X		
	618060	SHELF-WIRE/BOTTOM	X	X	X	X	X	X	X	X


REAR VIEW 322/323 SERIES

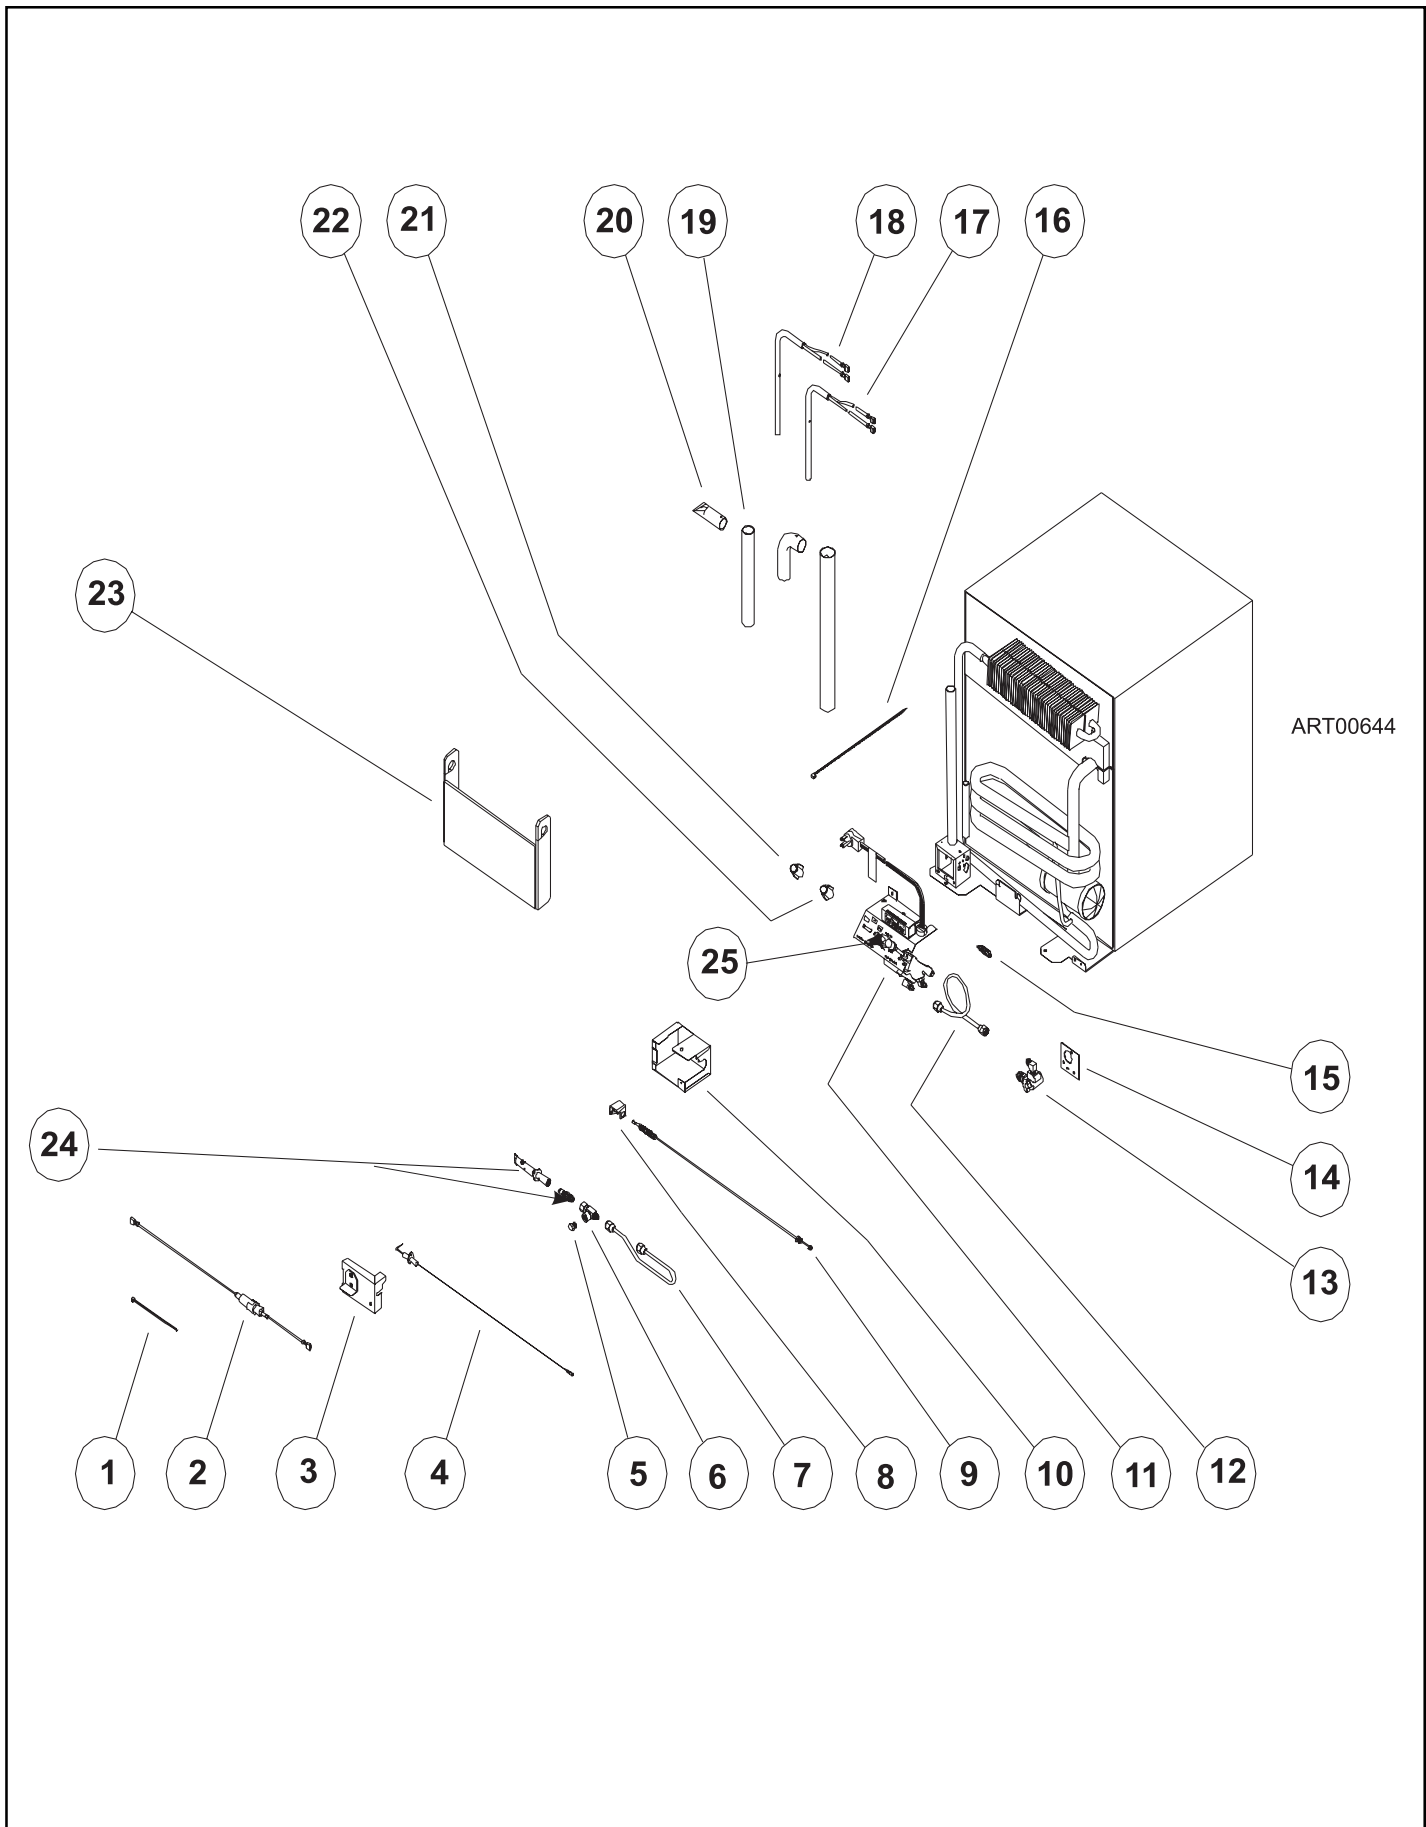

REAR VIEW 322/323 SERIES

NO.	PART #	DESCRIPTION	322	323	322BG	323BG	322JB	323JB	322T	323T
1	61417922	CABLE TIE-NYLON	X	X	X	X	X	X	X	X
2	61757222	FUSE ASSY DC SUPPLY LINE-DC KIT/EG3		X		X		X		
3	620850	BURNER BOX COVER ASSY-WITH DOOR/TOP	X	X	X	X	X	X	X	X
4	61722922	ELECTRODE-SPARK	X	X	X	X	X	X	X	X
5	61445322	PLUG-1/8" /FOR PRESSURE TAP	X	X	X	X	X	X	X	X
6	61755322	PRESSURE TAP (CONTACT NORCOLD CUSTOMER SUPPORT)	X	X	X	X	X	X	X	X
	61594422	PRESSURE TAP							X	X
NS	621079	CONNECTOR-SWIVEL NUT (NOT SHOWN)							X	X
7	61723322	BURNER TUBE-USE SERVICE KIT ASSY (CONTACT NORCOLD)	X	X	X	X	X	X	X	X
	621051	BURNER TUBE-322T/323T							X	X
8	61623422	BRACKET -FOR THERMOCOUPLE/USED WITH 61723122	X	X	X	X	X	X		
	618448	BRACKET-THERMOCOUPLE	X	X	X	X	X	X	X	X
9	61723122	THERMOCOUPLE-REPLACED BY 618445 & 618448	X	X	X	X	X	X		
	618445	THERMOCOUPLE	X	X	X	X	X	X	X	X
10	61721622	BURNER BOX-BOTTOM	X	X	X	X	X	X	X	X
11	617891	CONTROL ASSY-EG2	X		X		X		X	
	61751137	CONTROL ASSY-EG3		X		X		X		X
12	61723222	INLET TUBE	X	X	X	X	X	X	X	X
13	61749122	MANUAL SHUT OFF VALVE	X	X	X	X	X	X	X	X
14	61749822	BRACKET-MANUAL SHUT OFF VALVE	X	X	X	X	X	X	X	X
15	621737	INTERRUPTER	X	X	X	X	X	X	X	X
16	61706122	LADDER TIE	X	X	X	X	X	X	X	X
17	61745322	HEATER-AC	X	X	X	X	X	X	X	X
18	61745422	HEATER-DC/EG3		X		X		X		X
19	61755022	TUBE-EXHAUST	X	X	X	X	X	X	X	X
20	61754922	CAP-FLUE HEAT	X	X	X	X	X	X	X	X
21	61748722	KNOB-SELECTOR	X	X	X	X	X	X	X	X
22	61748822	KNOB-GAS CONTROL	X	X	X	X	X	X	X	X
23	617748	REAR BAFFLE (USE 619068)	X	X	X	X	X	X		
23	619068	BAFFLE ASSY-REAR			X	X	X	X	X	X
24	621949	KIT-BURNER/ORIFICE ADAPTER ASSY/32/N260	X	X	X	X	X	X	X	X
25	61645622	SPARK IGNITOR-MANUAL (NOT SHOWN)	X	X	X	X	X	X	X	X

CONTROL ASSEMBLY 322/323 SERIES

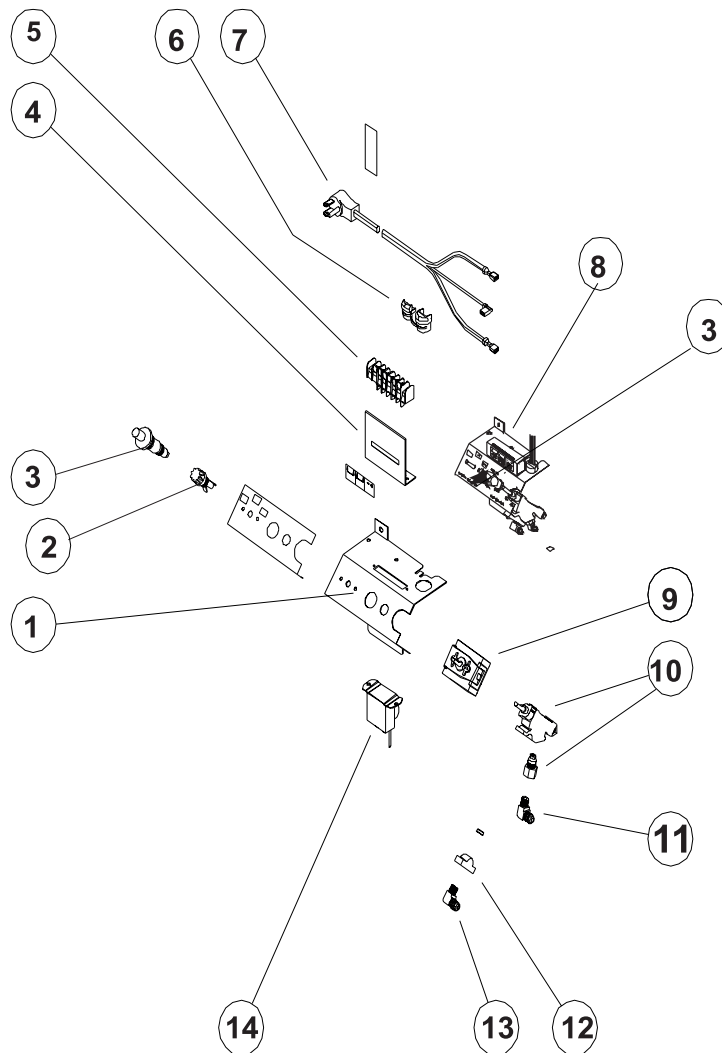

ART0673

CONTROL ASSEMBLY 322/323 SERIES

NO.	PART #	DESCRIPTION	322	323	322BG	323BG	322JB	323JB	322T	323T
1	61749222	BRACKET-CONTROL	X	X	X	X	X	X	X	X
2	61638722	FUSE HOLDER	X	X	X	X	X	X	X	X
	61440522	FUSE-GLASS/20 AMP	X	X	X	X	X	X	X	X
	61654622	FUSE-GLASS/3 AMP/32V OR LESS	X	X	X	X	X	X	X	X
3	61645622	SPARK IGNITOR-MANUAL (NOT SHOWN)	X	X	X	X	X	X	X	X
4	61756322	COVER-TERMINAL BLOCK	X	X	X	X	X	X	X	X
5	61754722	TERMINAL BLOCK	X	X	X	X	X	X	X	X
6	61395922	BUSHING-RELIEF	X	X	X	X	X	X	X	X
7	61745122	CORD-AC POWER	X	X	X	X	X	X	X	X
8	617891	CONTROL ASSY-EG2	X		X		X		X	
	61751137	CONTROL ASSY-EG3		X		X		X		X
9	61722422	SWITCH-SELECTOR (USE 619168)	X	X	X	X	X	X		
	619168	SWITCH-SELECTOR/4 POSITION		X	X	X	X	X	X	X
10	620349	GAS VALVE/OUTLET FITTING ASSY-SERVICE PART	X	X	X	X	X	X	X	X
NS	61758522	RUBBER GASKET-SOURDILLON CONTROL (NOT SHOWN)	X	X	X	X	X	X	X	X
NS	620654	BY PASS SCREW-#18 (NOT SHOWN)	X	X	X	X	X	X	X	X
11	61621622	BRASS ELBOW-UNION TUBE	X	X	X	X	X	X		
12	618692	SADDLE FITTING-WITH CONNECTOR/FORGED BRASS	X	X	X	X	X	X	X	X
13	619278	BRASS ELBOW-90 DEGREE/1/8 NPTF							X	X
14	61756722	THERMOSTAT (USE 618681)	X	X	X	X	X	X		
	618681	THERMOSTAT	X	X	X	X	X	X	X	X
NS	61752322	WIRE-4"/BLUE (NOT SHOWN)	X	X	X	X	X	X	X	X
NS	61752422	WIRE-4"/RED (NOT SHOWN)	X	X	X	X	X	X	X	X
NS	618557	WIRE-CONTROL/BLACK (NOT SHOWN)		X		X		X		X
NS	618558	WIRE-CONTROL/RED (NOT SHOWN)		X		X		X		X
NS	61752522	WIRE-ORANGE (NOT SHOWN)	X	X	X	X	X	X	X	X